



Laundry Room Instructions

Please use machines at your own risk. Coinamatic is not responsible for damage due to misuse or overloading.

TOP LOAD WASHER

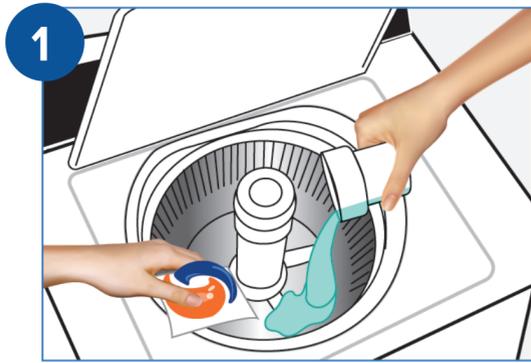


1 Add **1/4 cup** of detergent or 1 pod inside cylinder

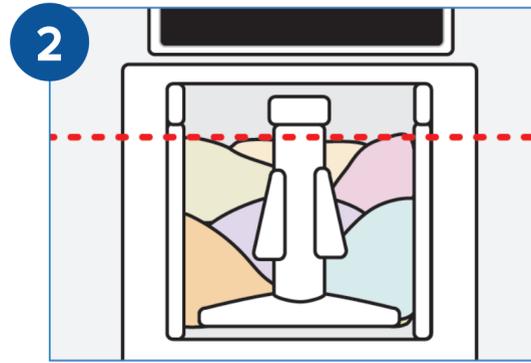


2 Load clothes loosely and evenly below **MAX** fill level




3 Select temperature / soil / fabric settings

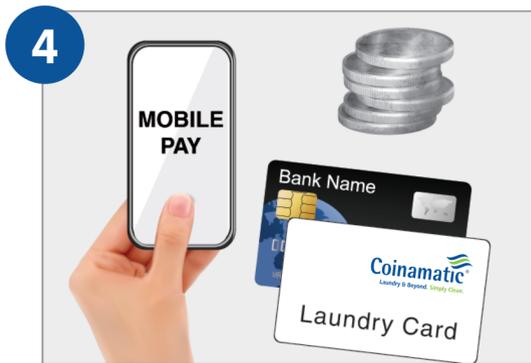

4 Use payment method on machine

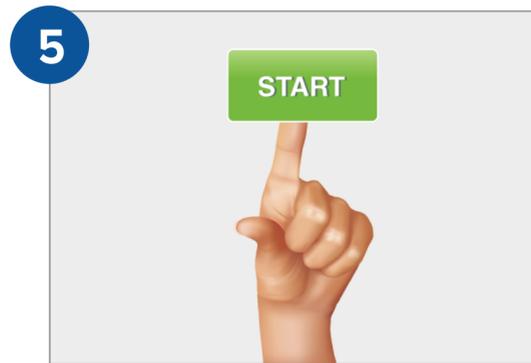


5 To start, press fabric setting or start

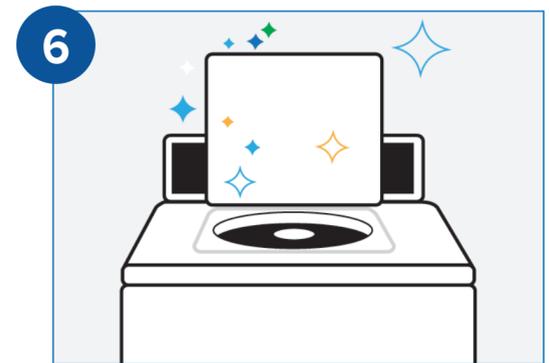


6 After use, clean machine and keep fresh with door open

DRYER

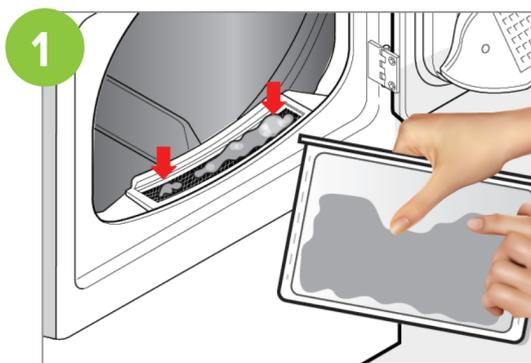


1 Clean lint screen

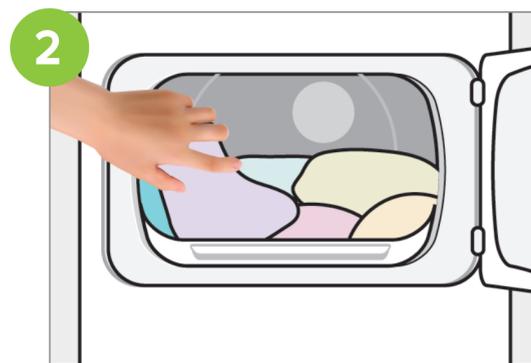


2 Load 1 wash load and close door



3 Select temperature / soil / fabric settings

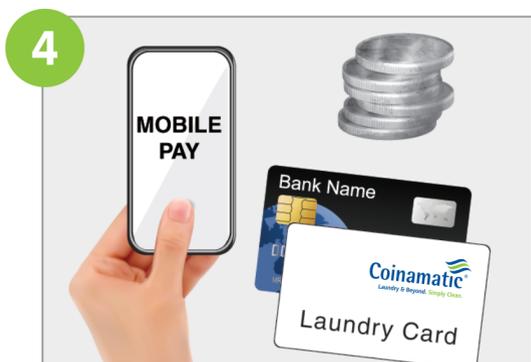

4 Use payment method on machine

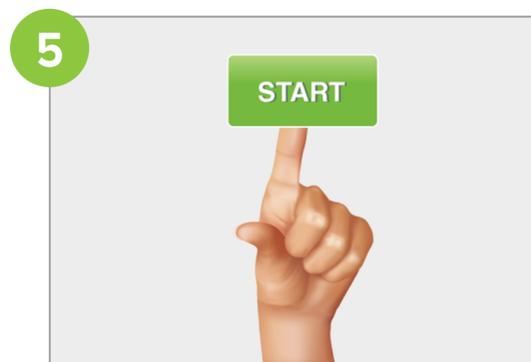

5 To start, press fabric setting or start

To submit a service request, simply report the 6-digit machine ID.



REQUEST SERVICE



Use the CP Mobile App



Online at coinamatic.com/service



Call us at 800.561.1972